


Инструкция по смене канала WIFI на модеме Thomson TCW 710 с блоком Wi-Fi.

1. Открываем любой браузер (Internet Explorer, Mozilla FireFox, Google Chrome, Opera и др.). В адресной строке необходимо набрать 192.168.0.1 либо 192.168.100.1 (web-интерфейс модема):

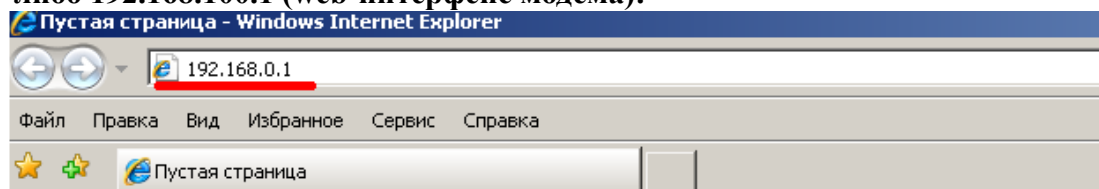


2. Попадаем на страницу авторизации.

LOGIN (имя пользователя): поле остается пустым

PASSWORD (пароль): **admin**

и нажимаем: **Вход**

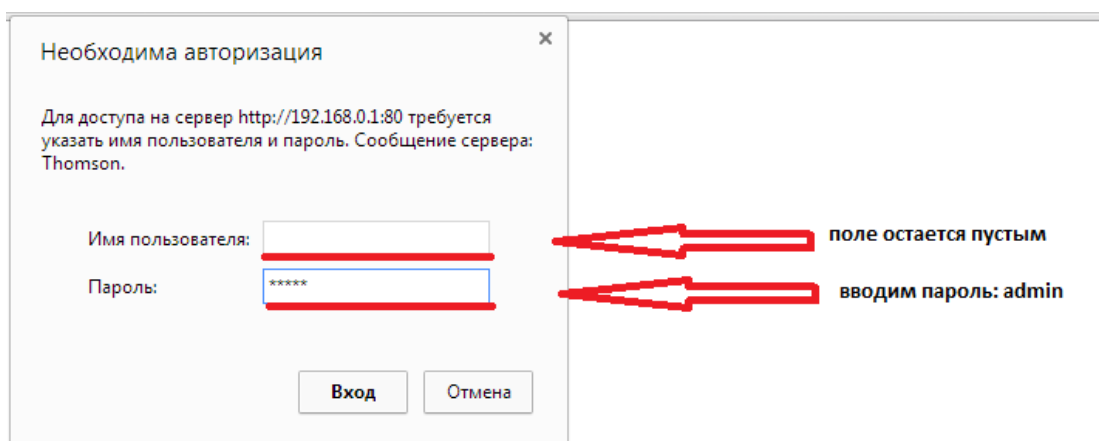

Попадаем на главную страницу web-интерфейса

3. Переходим во вкладку Wireless->Basic

4. В поле New Channel выбираем новый номер канала беспроводной сети.

5. Наживаем кнопку Apply.

192.168.0.1

Residential Gateway Configuration: Wireless - Basic Configuration

Status Network Advanced Firewall Parental Control **Wireless**

THOMSON

Wireless

802.11b/g Basic
This page allows configuration of the Access Point parameters, including the SSID and channel number.

Basic
Security
Access Control
Advanced
Bridging

Interface: Enabled

Wireless MAC Address: **00:18:9B:A3:60:AC**

Network Name (SSID): THOMSON

Closed Network: Open

New Channel: 11 <<< **Номер канала**

Current Channel: 11

Network Authentication: No Authentication

Data Encryption Mode: No Encryption

Apply Restore Wireless Defaults

SecureEasySetup
Use these buttons to manage your SecureEasySetup network.

Create SES Network Open SES Window